




WHERE TO INSTALL SAFETY GLASS

CRITICAL LOCATIONS

Safety glass should be fitted in all doors and other windows or glazed areas that are below 800mm from floor level. Glass panels less than 250mm wide can be fitted with 6mm glass or laminated glass instead of toughened glass. In doors where the glass comes within 1500mm from floor level.

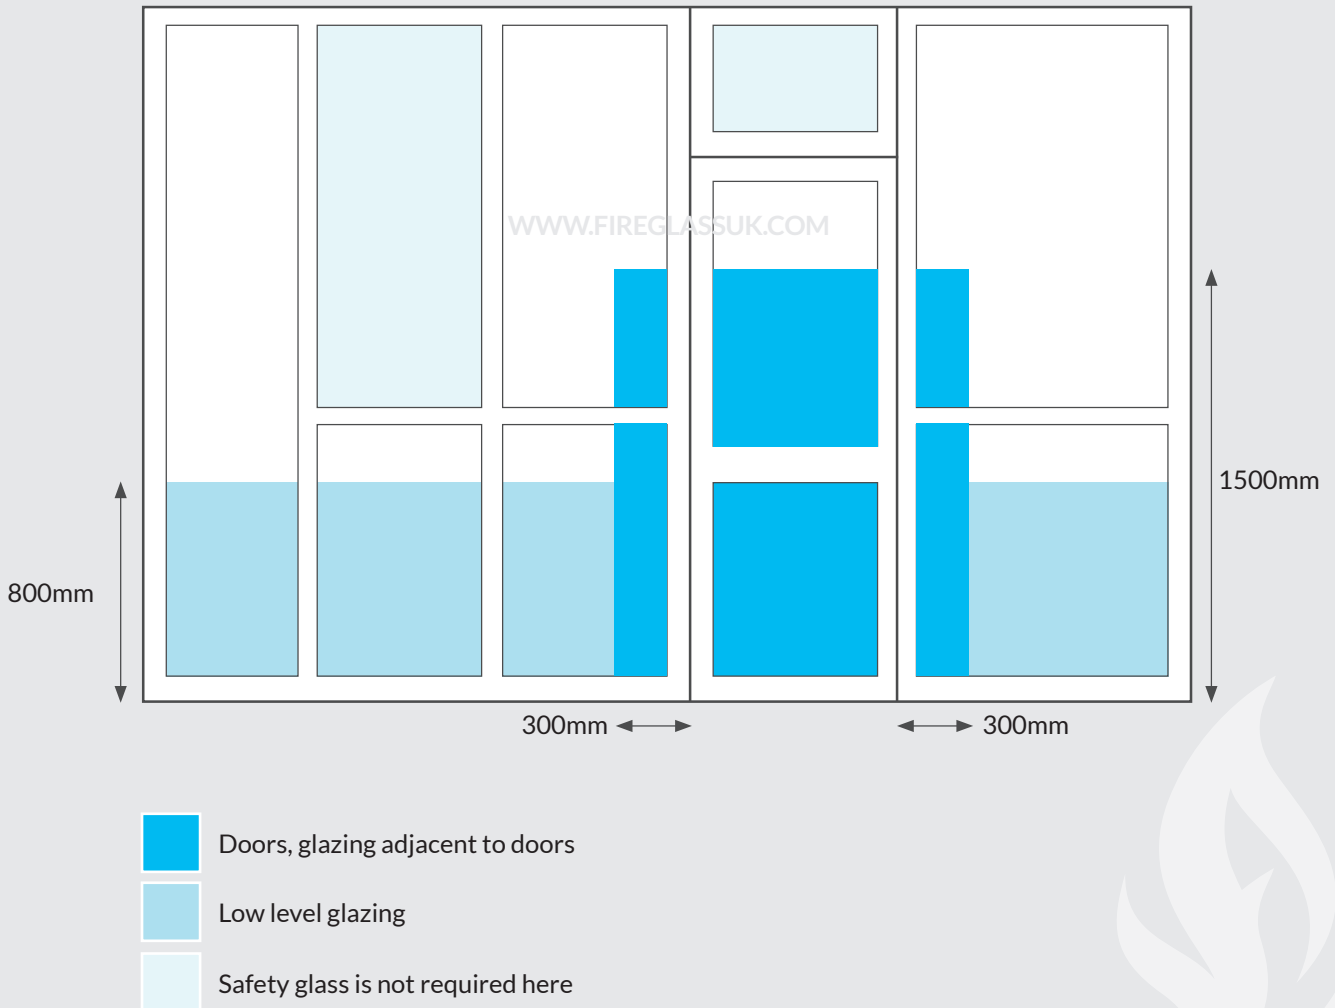

CRITICAL LOCATIONS

1. GLAZING IN DOORS

Any glass within 1500mm from floor level including any glass in doors that does not start over 1500mm from the floor must be safety glass.

2. GLAZING ADJACENT TO DOORS

Any windows or glass panels within 300mm of the edge of a door and which is also wholly or partially within 1500mm from floor level must be safety glass.

3. LOW LEVEL GLAZING

Any other kind of glazing that is within 800mm from floor level. This means that windows that are not located within 300mm of a door must use safety glass if the bottom of the glazing is within 800mm of the floor level.